

# MEXE02 波形モニタ機能 項目一覧

## BLVシリーズ

「No.」は信号を選択するときに表示される順番です。

### ■CH1～4

No.	信号名
1	指令速度[r/min]
2	検出速度[r/min]
3	インバータ電圧[V]
4	負荷率[%]
5	選択番号

### ■CH5～12

No.	信号名	No.	信号名
1	ALARM-OUT1	51	WNG
2	ALARM-OUT2	52	X0
3	ALARM-RESET	53	X1
4	DIR	54	X2
5	EXT-ERROR	55	X3
6	FWD(START/STOP)	56	X4
7	HMI	57	X5
8	M0	58	Y0
9	M1	59	Y1
10	M2		
11	MB-FREE		
12	MOVE		
13	MPS		
14	NET-IN0		
15	NET-IN1		
16	NET-IN2		
17	NET-IN3		
18	NET-IN4		
19	NET-IN5		
20	NET-IN6		
21	NET-IN7		
22	NET-IN8		
23	NET-IN9		
24	NET-IN10		
25	NET-IN11		
26	NET-IN12		
27	NET-IN13		
28	NET-IN14		
29	NET-IN15		
30	NET-OUT0		
31	NET-OUT1		
32	NET-OUT2		
33	NET-OUT3		
34	NET-OUT4		
35	NET-OUT5		
36	NET-OUT6		
37	NET-OUT7		
38	NET-OUT8		
39	NET-OUT9		
40	NET-OUT10		
41	NET-OUT11		
42	NET-OUT12		
43	NET-OUT13		
44	NET-OUT14		
45	NET-OUT15		
46	REV(RUN/BRAKE)		
47	S-BSY		
48	STOP-MODE(FWD/REV)		
49	TLC		
50	VA		