

MEXE02 波形モニタ機能 項目一覧

RK II シリーズ 位置決め機能内蔵タイプ

「No.」は信号を選択するときに表示される順番です。

■CH1,2

No.	信号名
1	指令速度[Hz]
2	内部電圧[V]

■CH3,4

No.	信号名	No.	信号名	No.	信号名
1	+JOG	51	MS1	101	SSTART
2	+JOG_R	52	MS1_R	102	SSTART_R
3	+LS	53	MS2	103	START
4	+LS_R	54	MS2_R	104	START_R
5	-JOG	55	MS3	105	STEPOUT
6	-JOG_R	56	MS3_R	106	STOP
7	-LS	57	MS4	107	STOP_R
8	-LS_R	58	MS4_R	108	TIM
9	ALM	59	MS5	109	WNG
10	ALM-RST	60	MS5_R	110	ZSG
11	AREA1	61	NET-IN0		
12	AREA2	62	NET-IN1		
13	AREA3	63	NET-IN2		
14	AWO	64	NET-IN3		
15	AWO_R	65	NET-IN4		
16	FREE	66	NET-IN5		
17	FREE_R	67	NET-IN6		
18	FWD	68	NET-IN7		
19	FWD_R	69	NET-IN8		
20	HMI	70	NET-IN9		
21	HOME	71	NET-IN10		
22	HOME_R	72	NET-IN11		
23	HOME-P	73	NET-IN12		
24	HOMES	74	NET-IN13		
25	HOMES_R	75	NET-IN14		
26	IN0	76	NET-IN15		
27	IN1	77	OH		
28	IN2	78	P-PRESET		
29	IN3	79	R0		
30	IN4	80	R1		
31	IN5	81	R2		
32	IN6	82	R3		
33	IN7	83	R4		
34	M0	84	R5		
35	M0_R	85	R6		
36	M1	86	R7		
37	M1_R	87	R8		
38	M2	88	R9		
39	M2_R	89	R10		
40	M3	90	R11		
41	M3_R	91	R12		
42	M4	92	R13		
43	M4_R	93	R14		
44	M5	94	R15		
45	M5_R	95	READY		
46	MBC	96	RVS		
47	MOVE	97	RVS_R		
48	MPS	98	S-BSY		
49	MS0	99	SLIT		
50	MS0_R	100	SLIT_R		